


How to use your mop



Step 1: Put mop in the “T” position, keeping the mop head on the floor. Make sure the “wringer” (box on the handle) is facing towards you. **PLEASE MAKE SURE THE MOP HEAD IS SOFT (using warm/hot water) OR THIS WILL NOT WORK.** Mop must be soft all the way through with no hard spots.



Step 2: Angle handle to the floor on the side where the wringer is. When you hear the mop “click”, lift up mop from floor. Mop will become vertical. **DO NOT TRY WITH YOUR HANDS.** Mop must be on the floor.

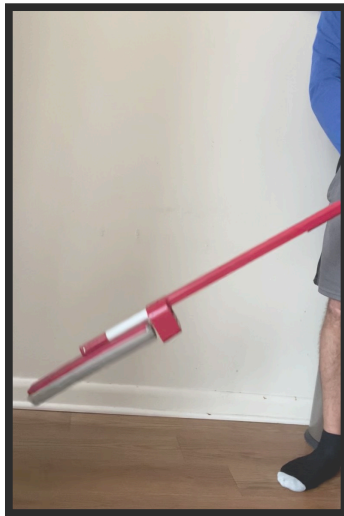

Step 3: As stated in previous step, when you hear mop “click”, lift up mop from floor. Mop will become vertical. (as seen in picture above)



Step 4: Turn mop around and wring off dirt. **PLEASE MAKE SURE THE MOP HEAD IS SOFT (using warm/hot water) OR THIS WILL NOT WORK.** Mop must be soft all the way through with no hard spots.



*****VERY IMPORTANT TIPS ABOUT YOUR REFILL HEADS and Sponge *****

Your Sponge and Mop Head **MAY** arrive to you **HARD** and **RIGID**. You **MUST** wet and soften completely before installing or using. Soak with **WARM** or **HOT** water to soften. Make sure it is soft **ALL THE WAY THROUGH**. Feel and squeeze the center of the sponge to make sure it is soft even in the center of the sponge. **REPEAT: Even in the center of the sponge *MUST* be soft or you cannot wring it out!!**

—->> IF YOU FEEL ANY HARD PARTS, CONTINUE TO SOAK AND SOFTEN BEFORE YOU USE. <<— —

When your sponge is completely soft and wet, it will puff up a little and become straight again. When your refill head dries, it will become hard and bend a little. This is OK because it will straighten out again after you soak it again.

REMEMBER, YOUR REFILL HEAD WILL STRAIGHTEN OUT WHEN SATURATED. DO NOT ATTEMPT TO INSTALL REFILL HEAD UNTIL COMPLETELY SOFT AND WET!!